



Part List

- 001 — Volute casing
- 010 — Frame foot
- 018 — Wear plate
- *020 — Wear ring
- 030 — Bearing housing
- 034 — Bearing cover
- 046 — Casing cover
- 048 — Mechanical seal cover
- 050 — Impeller
- 060 — Shaft
- 065 — Impeller nut
- 067 — Spacer sleeve (Mech. seal)
- *070 — Spacer sleeve (Soft pack.)
- 200 — Ball bearing
- 210 — Impeller key
- 211 — Coupling key
- 220 — Circlip
- 230 — Drain plug
- 231 — Air venting plug
- 232 — Grease drain plug
- 260 — Grease nipple
- *400 — Soft packing
- 405 — Mechanical seal
- 430.1 — Gasket (Wear plate)
- 430.2 — Gasket (Casing)
- 430.3 — Gasket (Mech. seal cover)
- 430.4 — Gasket (Wear plate)

*Optional