



Part List	
001	Volute Casing
003	Casing Cover
010	Support Foot
020	Wear Ring (casing)
021	Wear Ring (casing cover)
022	Wear Plate (front: semi-open) *
023	Wear Plate (back: semi-open) *
030	Bearing Bracket
031	Bearing Bracket Lantern
032	Cover (cooling/heating for sealing chamber) *
034	Bearing Cover (drive side)
035	Bearing Cover (pump side)
037	Cover (bearing cooling chamber) *
042	Stuffing Box Gland
044	Lantern Ring
050	Impeller (closed)
051	Impeller (semi-open) *
060	Shaft
065	Impeller Nut
067	Spacer Ring (bearing)
068	Spacer Ring (bearing)
070	Shaft Sleeve
088	Thrower
200	Ball Bearing
202	Cylindrical Roller Bearing
203	Angular Contact Ball Bearing
210	Key (impeller)
211	Key (coupling)
220	Circlip
230	Draing Plug
232	Oil Filling
234	Oil Sight Gauge
300	Stud & Nut
400	Stuffing Box Packing
405	Mechanical Seal *
422	Gasket
423	Gasket
424	Gasket
425	Gasket
426	Gasket

(*) Optional : Depending on customer requirement or request